



Di	Displayed Information						hoo
	(1) ( <b>2</b> )( <b>3</b> )	<f< th=""><th>lome scre</th><th>en and status icons&gt;</th><th>(13)</th><th>If you experience di the " 取扱説明書 #</th><th>fficulty se 詳細版 (F</th></f<>	lome scre	en and status icons>	(13)	If you experience di the " 取扱説明書 #	fficulty se 詳細版 (F
Statu	us icons — 🕅	₹ <b>₩</b> ₿₩\$	╽╽┍┙┍┙ ᠅᠐┉╩╶╴᠈	Ŭ Ŭ 00%	ஜு.ஆ. தியாத்து 100% —	Speed Wi-Fi ma	in unit • Make
		(Wed)	0ct. 10	Flick screen to left	Usage +A <b>8.0GB</b>	to the Internet	<ul> <li>The incor</li> <li>If the conn</li> </ul>
N	Nessage Plan	lease update	the software fro	Flick screen	Total <b>15.0GB</b> lease update the software from $\Gamma >>$ Slide to unlock	Communication is easily disrupted, communication is unstable	<ul> <li>If the such</li> <li>If the mention</li> </ul>
	If the s	ecurity loci	• • k is set, 🗗 wi	ll be	• •		• Chec or by
	display	/ed as 🛐 (g een>	green). 🦳 <	Wi-Fi screen>	<info screen=""></info>		<ul> <li>If the</li> <li>If the</li> </ul>
5 11	็ม <b> /+</b> A 🕬 NOR 1009	% 💼 11:38	<	Wi-Fi 🎧	K INFO ŵ		prod (Japa
	<b>a n</b> (		QR Coo WPS	de >	Data Usage		<ul> <li>If "Au this h Oper</li> </ul>
	Wi-Fi INFO SET	TINGS	Transfe Wi-Fi /	er Wi-Fi Settings >	Device Info		Conf
D	isplayed when [	Slide to	CPS01-	ed when [	Displayed when [1] INFO] is		(For H Softv
ui sc	nlock] is swiped on the creen.	home	tapped	on the main menu screen.	tapped on the main menu screen.	Communication seems slow	<ul> <li>Move</li> <li>The v</li> <li>If the</li> </ul>
	<settings scre<br="">&lt; settings</settings>	en> 命	<de &lt;</de 	vice Info screen>  < Device Info  众	Settings message display>	The charge in the	The p
	QR Code	>	Device Speed	Name Wi-Fi DOCK 5G 01	••.	decrease quickly	Wi-Fi * If E
	Transfer Wi-Fi Settings	>	Model CPS01 Mac Ac	ddress	•••		Using     * Fui     * Div
	Wi-Fi Name CPS01-XXXXXX	>	XX:XX: IMEI	XX:XX:XX:XX	Now in progress. Please wait		Oper
D ta	visplayed when [ 🔅 SETT apped on the main men	[INGS] is nu screen.	Displaye "Device main me	ed when "INFO" - Info" is tapped on the enu screen.	This is displayed while doing settings for the product.	Dock	• Cher
<d< td=""><td>isplay during po</td><td>wer off:</td><td><ul> <li>You</li> <li>num</li> </ul></td><td>can confirm the phone uber, etc.</td><td></td><td>to the Internet</td><td>Chec</td></d<>	isplay during po	wer off:	<ul> <li>You</li> <li>num</li> </ul>	can confirm the phone uber, etc.		to the Internet	Chec
						not light up or flash.	Chec     Set tl
		100%				After setting the Speed Wi-Fi main uni	• When
						not operate correctly	and t
Dis is p	splayed when the powe pressed while the power	r button r is off.				(Troubleshooting)"	in "取扨
No.	Name	Indicator	State	Expla	nation	■ Windows is a registered tra OS X, iPadOS, AirMac, iPad, iPl of Apple Inc. ■ The iPhone	demark or t none, and Sa trademark i
1	Connection network	5G	Lit	Indicates a 5G connection	When communicating	Corporation in the United Sta gle LLC. ■ "QR Code" is a re Other company names. br	tes and/or o gistered tra and names.
		4G	Lit	connection	When sending When receiving Indicator	omitted in this manual. © CPSpeed CO.,LTD. 2025 This prior written permission from	manual and
(2)	Reception level		Lit	indicates the signal strength in 4 levels	or Wide Area Network (WAN)		<b>C</b>
3	Connection	X	Lit	Indicates that the product is Indicates that the "Communi	out of the service area cation Mode" is set to "Stan-	Product	Spe
	status	57	Lit	dard Mode" Indicates that the "Communic	cation Mode" is set to "Plus	For details on the (Japanese) or the	e produ e produc
		+A	Lit	Area Mode" *1 Indicates that International R	oaming is enabled	Product page of	this pro
		<sup>R</sup> ST	Lit	(When using a contract with that supports overseas use)	a telecommunications carrier	https://www.cps	peed.co
(4)	Wireless LAN (Wi-Fi®) band	<b>న</b> ₃ఊ	Lit	Indicates that the product is of (Number to the top right of the cates the number of connect	connected to the 2.4GHz band he image of the person indi- ted devices)	About supported OS This product can be used on OS: Mac, and Linux, that comply with stack (use limited to Japanese use)	i, such as Wind In the TCP/IP pi rsions of the C
		౸ఄ౾	Lit	Indicates that the product is of (Number to the top right of the cates the number of the top right of the cates the number of the top right of the number of	connected to the 5GHz band he image of the person indi-	However, the following OSs are s connection: Windows® 11, Windows® 10, Jap (x86) versions and 64 bit (v64)	upported dur
		<u>ک</u> چ	Lit	Indicates that the product is of both Wi-Fi frequency setting	connected to the 2.4GHz/5GHz	14, and 13 Japanese versions	and the
5	Bridge Mode settings	B	Lit	Indicates that Bridge Mode is	set		
6	DFS status	DFS	Lit	DFS detection in progress			
	function	ψ	Lit	tethering function is enabled	led via USB, and that the USB		
8	Software update notification	Ţ	Lit (orange)	Indicates that the latest softw software update is required	vare has been released and a		
9	Power Saving Function	ECO	Lit (green)	Indicates that "ECO Mode" (Prid Indicates that the product is a	oritize saving battery) is running saving energy when the		
		NOR	Lit (green)	remaining battery level is low Indicates that the product is	v while "ECO Mode" is off running with "ECO Mode" off		
(10)	Dock connection	NUK	Lit	(prioritize balance)	ble is connected to the dock.		
m	status Battery Power	53 	Lit	and that the Ethernet cable is	s recognized		
10	Remaining Battery status	100%	Lit	Indicates % battery power re-	maining scale of 11 levels		
	Dattery StatUS		Lit	Indicates that the battery is b	being charged		
		<b>C</b>	Lit	Indicates that "Care charging only (from 0:00 AM to 5:00 AM	" is set to either "Nighttime M)" or "Always on"		
(13)	Indicates data usage	2	-	Display of data usage is divid and total data usage for +A n	ed into +A mode, ST mode, node.		
* F	or details, refer to "1-2	2 各部の	名称と機能	Statistics for data usage cove	r 1 month. <sup>*2</sup> in "取扱説明書 詳細版 (Full		
lr *1: P	nstruction Manual)" (J Please note that if usin	apanese). g after sw	itching to th	e "Plus Area Mode" (+A), addit	ional charges may be billed in		
*2: •	ddition to your paym Data usage amounts International roaming	ent plan. will be re g data is p	set if the SIM	I card is swapped out.			
	(When using a contra	act with a	telecommur	nications carrier that supports	overseas use)	J	
Ho	ow to Rest	art					
<wr< td=""><td>nen restarting fror</td><td>m the po</td><td>ower butto</td><td>on&gt; <when restarting<="" td=""><td>g from the main menu&gt;</td><td>1</td><td></td></when></td></wr<>	nen restarting fror	m the po	ower butto	on> <when restarting<="" td=""><td>g from the main menu&gt;</td><td>1</td><td></td></when>	g from the main menu>	1	
	Press and hold	the po	wer but	- 1 On the hom	then tap "SETTINGS"		
	and on the Pov	wer Op	tion scre	en - "Restart" -	"OK".		
	that appears, to	ap "Res	start".	<whan restarti<="" td=""><td>ing from Webl UN</td><td></td><td></td></whan>	ing from Webl UN		
1	Shute	down		<ul> <li>Michiestalti</li> </ul>		1	

Froubleshooting						
i oubiesi	looting					
you experience difficulty setting up an Internet connection even when the instructions in the "Setup Guide" and he " 取扱説明書 詳細版 (Full Instruction Manual)" (Japanese) are followed, please check the following items.						
Speed WI-FI main						
Unable to connect to the Internet	<ul> <li>Make sure that you are located in a service area.</li> <li>The incoming signal strength may be low. Retry the connection in a location with a higher incoming signal strength.</li> <li>If the "ST" or "+A" icon does not appear in the display, launch WebUI to check that an Internet connection has been properly set up.</li> </ul>					
Communication is easily disrupted, communication is unstable	<ul> <li>If the incoming signal strength is low, move to a location that has a higher signal strength, such as beside a window.</li> <li>If the 5G and 4G indicators are not stable, then change the network mode from "5G(Recommended)" to "4G".</li> <li>Operating procedure: From the home screen, open the main menu, "SETTINGS" - "Network Mode"</li> <li>Check to see if the product is properly connected to a PC, or the like, on a wireless LAN (Wi-Fi®), or by a USB cable (commercially available).</li> <li>If the product is connected to a PC, or the like, on a wireless LAN (Wi-Fi®) restart the product.</li> <li>If there is radio interference from other networks, such as multiple access points having been set up in the vicinity, radio reception may be improved by changing "Channels" for the product. (Refer to "8-5 Wi-Fi (Wi-Fi)" in " 取扱說明書 詳細版 (Full Instruction Manual)" (Japanese).</li> <li>If "Auto Wi-Fi OFF" is enabled, the "2.4 GHz" Wi-Fi frequency connectivity may be unstable. If this happens, disable this function.</li> <li>Operating procedure: From the mome screen, open the main menu, "SETTINGS" - "Power Saving Function" - "Standby Setting" - "Auto Wi-Fi OFF"</li> <li>Confirm that this product has the latest software.</li> </ul>					
	Operating procedure: If a new version is available, it will be displayed on the home screen. (For how to update the software, refer to " <b>10-1</b> ソフトウェアを更新する (Updating Software)" in " 取扱説明書 詳細版 (Full Instruction Manual)" (Japanese).)					
Communication seems slow	<ul> <li>Move to a location for a higher 5G/LTE signal strength.</li> <li>The wireless LAN (Wi-Fi<sup>®</sup>) might be congested. Try changing the Wi-Fi frequency settings to 5GHz.</li> <li>If the remaining battery level is less than 50%, or if the "ECO Mode" power saving function is enabled, 5G connections will not be possible.</li> </ul>					
The charge in the battery seems to decrease quickly	The product settings and power consumption are as follows.     Power Saving Function ECO Mode enabled < ECO Mode disabled     Wi-Fi Band 2.4 GHz < 5 GHz (Indoor/Outdoor) < 2.4G/5G both     * If ECO Mode is enabled, the Wi-Fi Band can only be set to 2.4 GHz.     Using the "Auto Wi-Fi OFF" makes the battery last longer while not transmitting.     * Functions only at 2.4GHz/W52 and does not function at W56/simultaneous transmission.     * Disable this setting if the wireless LAN (Wi-Fi®) connection is unstable.     Operating procedure: From the home screen, open the main menu, "SETTINGS" - "Power Saving Function" - "Standby Setting" - "Auto Wi-Fi OFF"					
Dock						
Unable to connect to the Internet	Check that the Speed Wi-Fi main unit is turned on.					
The LAN light does not light up or flash.	Check that the Ethernet cable (commercially available) is connected correctly.     Check that the specified charging equipment (sold separately) is connected.     Set the Speed Wi-Fi main unit on the dock again.					
After setting the Speed Wi-Fi main unit on the dock, it does not operate correctly.	<ul> <li>when using the dock, ensure that you connect the specified charging equipment (sold separately).</li> <li>Remove the Speed Wi-Fi main unit from the dock, confirm that the home screen is displayed, and then set it on the dock again.</li> </ul>					
egarding details on setting procedures and other information, refer to "10-2 故障とお考えになる前に "roubleshooting)" in " 取扱説明書 詳細版 (Full Instruction Manual)" (Japanese). 						
findows is a registered trad, (; iPadOS, AirMac, iPad, iPho pple Inc. The iPhone tr voration in the United State LC. Ver Code" is a regi	emark or trademark of Microsoft Corporation in the United States and/or other countries. Mac, Macintosh, Mac OS, macOS, ne, and Safari are trademarks of Apple Inc. registered in the United States and/or other countries. App Store is a service mark ademark is used under license from Aiphone Co, Ltd. Microsoft Edge is a trademark or registered trademark of Microsoft sand/or other countries. Google, Android, Google Chrome, and Google Play are trademarks or registered trademark of Goos istered trademark of DENSO WAYE INCORPORATED. USB Type-C is a trademark of the USB Implementers Forum.					

d related software may not be duplicated or altered, nor can duplicate copies be distributed, in whole or in part, withou

## cifications

ct specifications, refer to the " 取扱説明書 詳細版 (Full Instruction Manual) ict page of this product.

oduct o.jp/s\_products/cps01/ (in Japanese only)

ring USB

1

Log in to WebUI, and from the home screen, tap "Management" - "Restart/Reset to Factory Default Settings" - "Restart".